


## 6. Wiper Relay Unit

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the wiper arm. <Ref. to WW-16, REMOVAL, Front Wiper Arm.>
- 3) Remove the cowl panel. <Ref. to EI-30, REMOVAL, Cowl Panel.>
- 4) Disconnect connector (A) of the wiper motor assembly.
- 5) Remove bolt (B) and clip (C).
- 6) Disconnect connector (D) of the wiper relay unit.

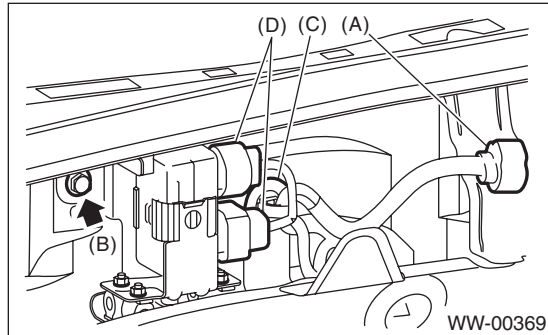

#### NOTE:

Unit body, bracket, and rubber mount is an assembly component and cannot be disassembled.


### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- Do not reuse the clips. Always replace them with new parts.
- Make sure the connector connection and clip insertion is secure, and confirm the contact.

### C: INSPECTION

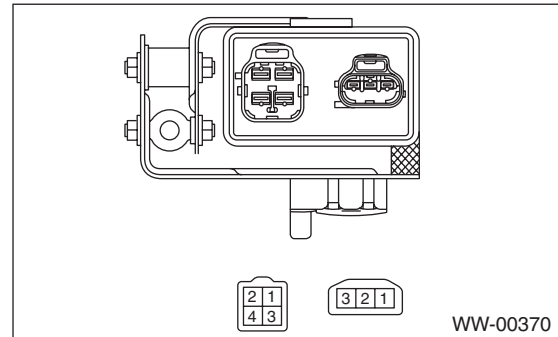

- 1) Inspect the continuity of 4 pole connector.

| Terminal No. | Specification |
|--------------|---------------|
| 1 and 2      | Less than 1 Ω |

- 2) Connect the battery to the 3 pole connector and measure the continuity of 4 pole connector.

| Terminal No.     |                  | Specification |
|------------------|------------------|---------------|
| 3 pole connector | 4 pole connector |               |
| 2 and 3          | 1 and 4          | Less than 1 Ω |
| 1 and 2          | 3 and 4          | Less than 1 Ω |

- 3) When measurement value is different from the specification, replace the wiper relay unit.